


NSB TECH

SALT IN CRUDE OIL CONTENT AUTOMATIC ANALYSER

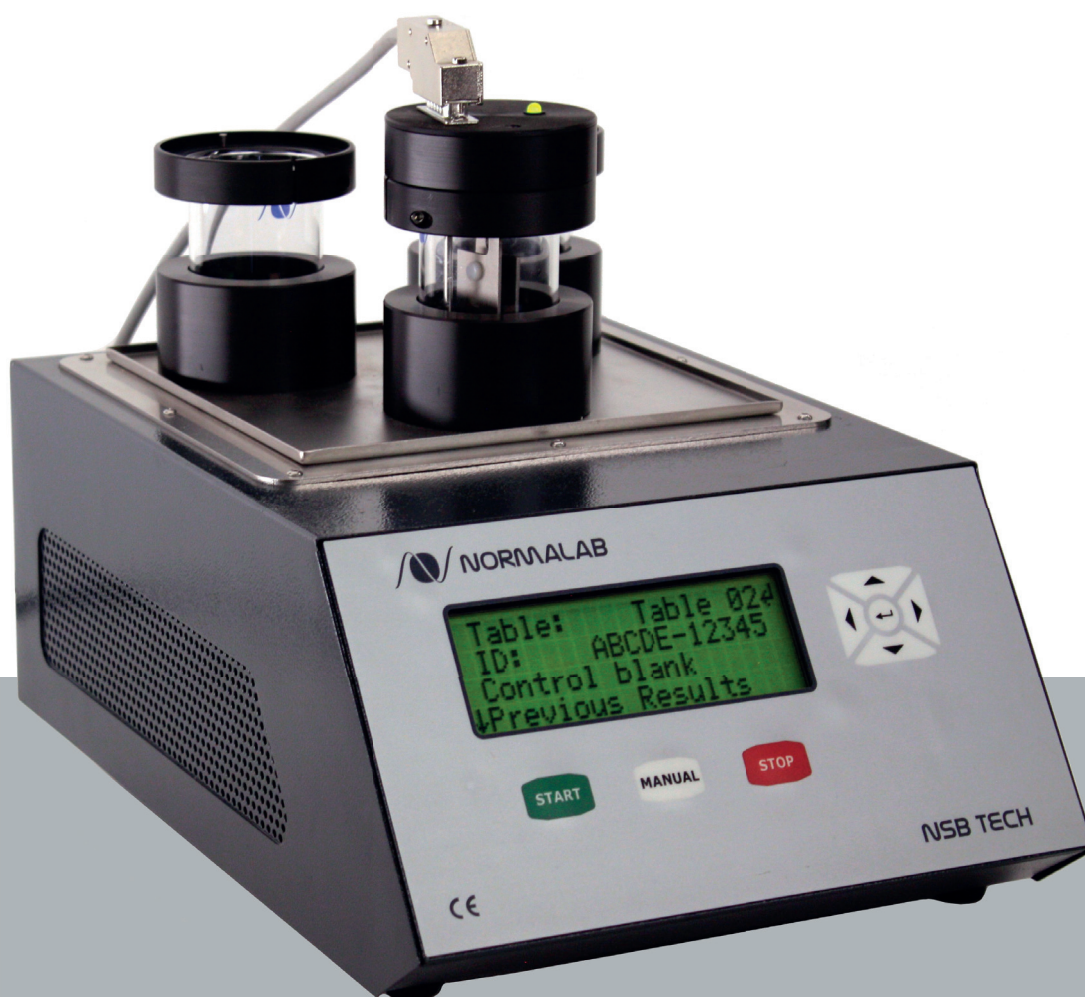

STANDARDS

ASTM D 3230, IP 265 and related methods.

SCOPE

This test method measures conductivity in the crude oil due to the presence of common chlorides, such as sodium, calcium, and magnesium by electrometric method.


NSB TECH is an automatic salt in crude concentration analyser developed by Normalab. Normalab has been designing and manufacturing petroleum testing instruments and glassware since 1963.



« FULL COMPLIANCE
FOR COMMERCIAL
AND CUSTOMS
APPLICATIONS »

SPECIFICATIONS

- Fully automatic model for safer measurements
- Plug and play
- Less than 30 sec for measurement
- Digital auto ranging meter to read the voltage and current
- Auto voltage adjustment between 0 and 250 VAC
- Apparatus conforms to ASTM D 3230
- Accuracy (+ / - 0.5%) for the calibration
- Salt concentration values displayed automatically
- Automatic table selection depending on sample temperature
- Maintenance free
- Results in PTB, g/m³, mg/kg

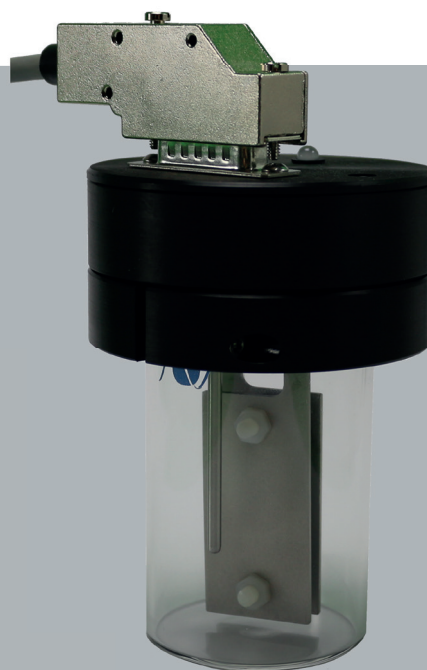

*Photos are non-contractual - they may differ from actual products.

APPLICATION

- Refineries
- Pipelines
- Terminals
- Laboratories
- Inspection Companies
- Oil platforms
- Customs

SOFTWARE FEATURES



Fully automatic, the NSB TECH does the analysis process by itself. Thanks to pre-recorded tables, it determines the concentrations according to the temperature by an electrometric method.

- Pre set calibration at 3 different temperatures
- Direct display of salt concentration
- Quick result
- Automatic table selection according to sample temperature
- Automatic adjustment of measuring range
- Interchangeable plug-in sensor
- User calibration modes allow verification against user standards

CALIBRATION



With a voltage up to 250 V, the user security is the main critical point. The test can be started only if the lid is on position with the beaker. The red light on the lid indicates the ongoing test.

- High level of safety
- Safety for unintended touching of electrodes
- Over current safety
- Hall effect sensor to cut the power with the lid opening
- Alarm during measurements
- Light indicator

RELATED PRODUCTS

NSB TECH is user-friendly with its digital screen and the quick access keypad. You can easily set the parameters. The integrated software allows you to :

- Export data through an USB port
- Transfer the select result on local printer
- Configure up to 20 tables
- Connect a Keyboard for an easy data entering

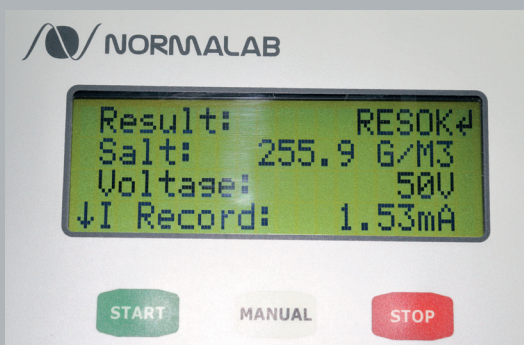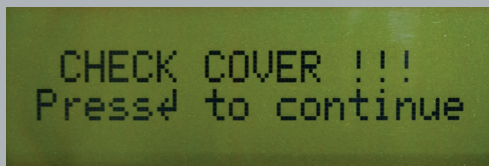

ORDERING INFORMATION

Fully automatic analyzer of salt concentration in crude oil

942800

NSB TECH calculates automatically salt in crude concentration directly from acquired temperature and conductivity values. It measures the conductivity of a solution of crude oil in a mixed alcohol solvent when subjected to an electrical stress. The automatic method allows sending voltages to the electrodes of 25V, 50V, 125V, 200V and 250V.

Scope of delivery:

NSB TECH is delivered with :

- 1 Cover with electrode (P/N 942801)
- 3 Beakers with rings (P/N 942802)

Accessories and options according to your application must be ordered separately.

Site requirements:

- Power supply : AC 100 to 240 V, 50 & 60 Hz - 2 A
- Dimension :(W) 250 x (D) 370 x (H) 200 mm
- Weight : 6 kg

SUMMARY

Temperature measurement	17°C to 33°C	Voltage adjustment	Automatic
Temperature unit	°C or °F	Test voltage	up to 250 V
Temperature resolution	0,1°C	Results resolution	1 V / 0,01 mA
Language	English or French	Power supply	100 to 240 V



CONTACT : sales@normalab.com

Normalab FRANCE SAS
ZA Caux Multipôles 1 - 76190 Valliquerville
Tel. : +33 232.700.100
Fax : +33 232.704.732

DISTRIBUTED BY